

Ezi-STEP® II

Micro Stepping System

- Embedded Motion Controller
- CC-Link Interface
- Microstepping
- Software Damping
- High Torque

CC-Link



CE



Fast, Accurate, Smooth Motion



Fast, Accurate, Smooth Motion

Ezi-STEP[®] II CC-Link


Micro Stepping System



1 CC-Link Based Motion Control

Ezi-STEP II CC-Link is a stepping motor control system that supports CC-Link, an open field network based on RS-485.

Ezi-STEP II CC-Link is a remote device station connected to the CC-Link system. It performs various controls and processes motion and monitoring functions with device commands.

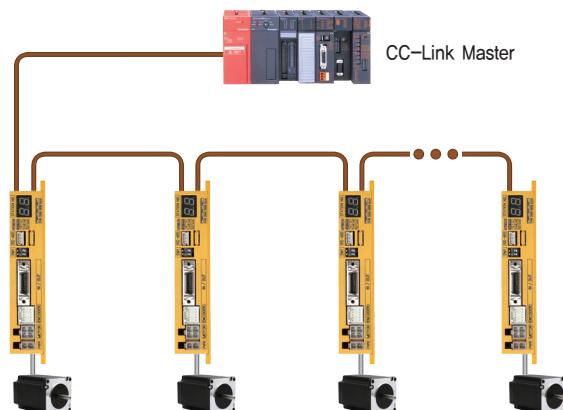


2 High Torque

(Motor Voltage Increasing and Motor Current Setting)

Ezi-STEP II boosts the voltage supplied to the motor by internal DC-DC Converter. The torque at the high-speed is increased. In addition, it is possible to set the Run Current up to 150%, whereby the torque at low-speed is increased.

Torque can be improved by about 30% over the entire speed range.

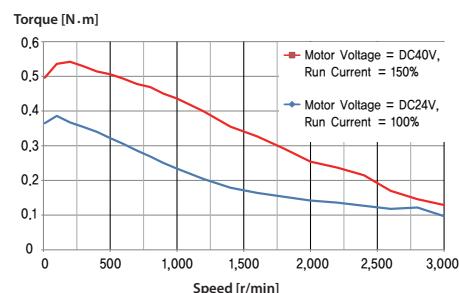

※ The torque at high speed is improved about 30%

Measured Condition : Drive = Ezi-STEP II-CL-42L

Motor Voltage = DC40V

Input Voltage = DC24V

3 Microstep and Filtering

The high-performance MCU operates at step resolutions of 1.8° up to maximum 0.0072° (1/250 steps) and Ezi-STEP II adjusts PWM control signal in every 50μ sec, which makes it possible for more precise current control, resulting in high-precision Microstep operation. In addition, Ezi-STEP II applies filtering control to enable smooth operation even at very low-speed.


4

Software Damping

Motor vibration is created by magnetic flux variations of the motor, lower current from the drive due to back-emf from the motor at high speeds and lowering of phase voltages from the drive.

Ezi-STEP II drive detects these problems and the MCU adjusts the phase of the current according to the pole position of the motor, drastically suppressing vibration.

This allows the smooth operation of the motor at high-speeds.

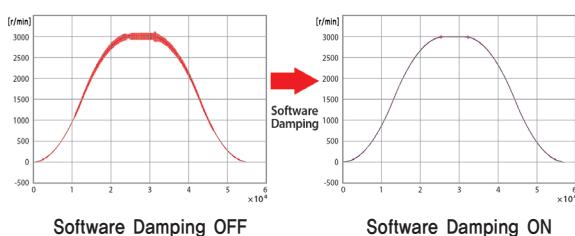

※ This is real measured speed that using 100,000 P/R encoder,

5

Improved high-speed operation performance

Depending on the speed of a stepping motor, Ezi-STEP II automatically increases the supply voltage and prevents the torque lowering due to the low operating voltage to the motor caused by back-emf voltage, this enables high-speed operation. Additionally, the software damping algorithm minimizes the vibration and prevents the loss-of-synchronization at high-speed.

※ Applicable model : Ezi-STEP II -CL-42 Series


Ezi-STEP II -CL-56 Series

Ezi-STEP II -CL-60 Series

● Motion Controller Features of Ezi-STEP II


1. Loop Count

This function allows positioning repeatedly according to the Loop Count Number.

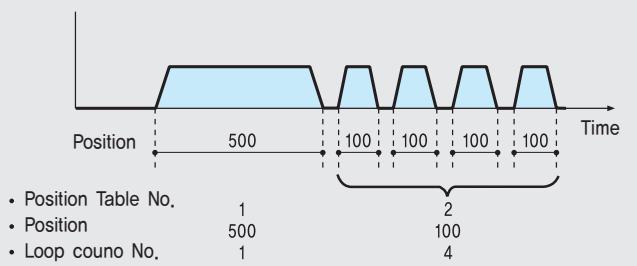


2. Acceleration/Deceleration

For quick acceleration and gradual deceleration, you can set each acceleration and deceleration time separately.

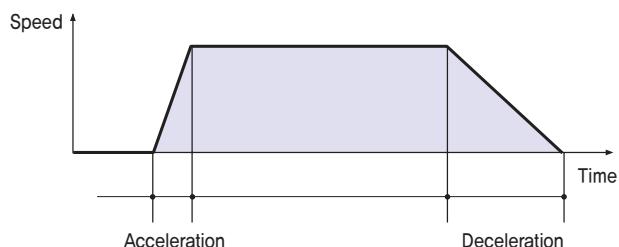


3. Pause

You can pause the motion upon the input of an external signal. When Pause signal change to OFF, the motor will restart to original target position.

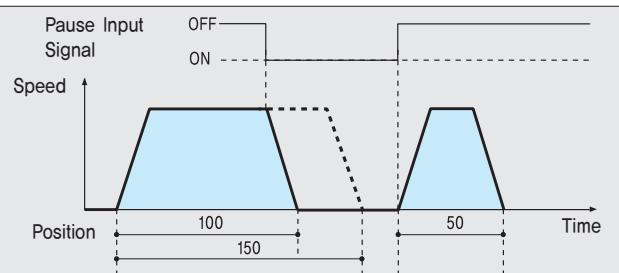


4. Alarm

The number of LED flashing time and information on the 7-Segment LED display indicates which Alarm has occurred.

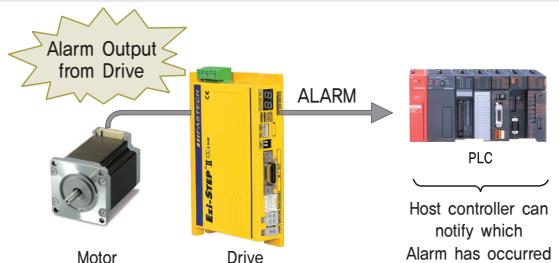

5. Teaching

Teaching signal is used to memorize current Position data into the selected Position Table item.

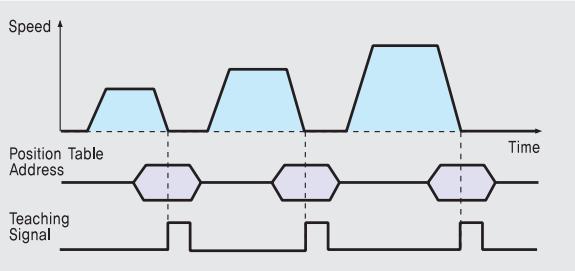


6. Jump


Within one Position Table, you can select various Position Table numbers that you want to jump. With three external input signal during movement, the next jump Position Table number can be select.

◆ Position Table #14

Position	---	Next	---	Input 1	Input 2	Input 3	---
10000		100		115	116	117	

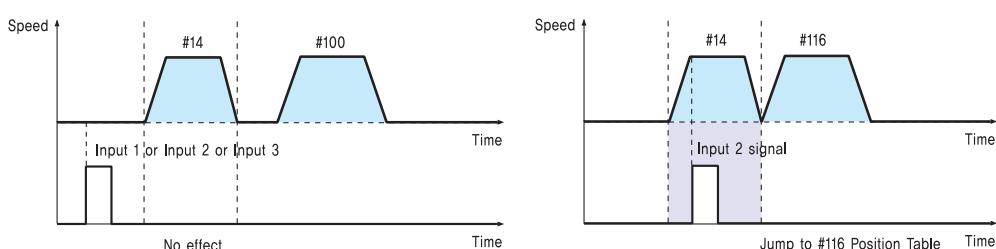

● Ezi-STEP II CC-Link Part Numbering

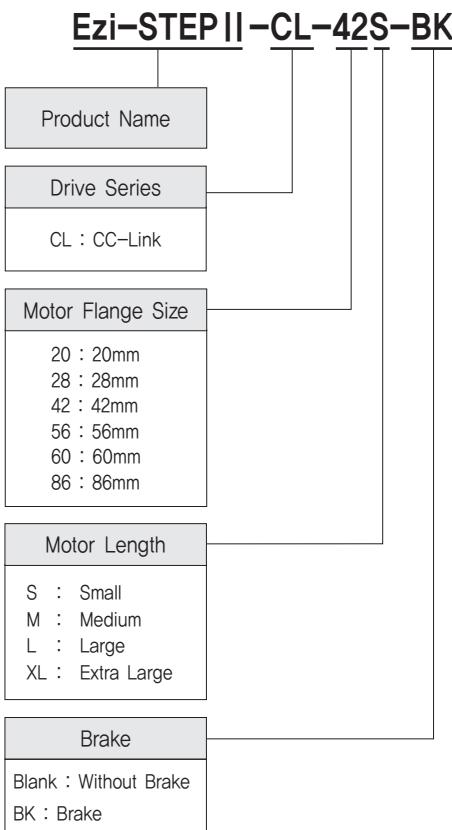

● Standard Combination

Unit Part Number	Motor Model Number	Drive Model Number
Ezi-STEP II-CL-20M	BM-20M	EzT2-CL-20M
Ezi-STEP II-CL-20L	BM-20L	EzT2-CL-20L
Ezi-STEP II-CL-28S	BM-28S	EzT2-CL-28S
Ezi-STEP II-CL-28M	BM-28M	EzT2-CL-28M
Ezi-STEP II-CL-28L	BM-28L	EzT2-CL-28L
Ezi-STEP II-CL-42S	BM-42S	EzT2-CL-42S
Ezi-STEP II-CL-42M	BM-42M	EzT2-CL-42M
Ezi-STEP II-CL-42L	BM-42L	EzT2-CL-42L
Ezi-STEP II-CL-42XL	BM-42XL	EzT2-EC-42XL
Ezi-STEP II-CL-56S	BM-56S	EzT2-CL-56S
Ezi-STEP II-CL-56M	BM-56M	EzT2-CL-56M
Ezi-STEP II-CL-56L	BM-56L	EzT2-CL-56L
Ezi-STEP II-CL-60S	BM-60S	EzT2-CL-60S
Ezi-STEP II-CL-60M	BM-60M	EzT2-CL-60M
Ezi-STEP II-CL-60L	BM-60L	EzT2-CL-60L
Ezi-STEP II-CL-86M	BM-86M	EzT2-CL-86M
Ezi-STEP II-CL-86L	BM-86L	EzT2-CL-86L
Ezi-STEP II-CL-86XL	BM-86XL	EzT2-CL-86XL


● Combination with Brake

Unit Part Number	Motor Model Number	Drive Model Number
Ezi-STEP II-CL-42S-BK	BM-42S-BK	EzT2-CL-42S
Ezi-STEP II-CL-42M-BK	BM-42M-BK	EzT2-CL-42M
Ezi-STEP II-CL-42L-BK	BM-42L-BK	EzT2-CL-42L
Ezi-STEP II-CL-42XL-BK	BM-42XL-BK	EzT2-CL-42XL
Ezi-STEP II-CL-56S-BK	BM-56S-BK	EzT2-CL-56S
Ezi-STEP II-CL-56M-BK	BM-56M-BK	EzT2-CL-56M
Ezi-STEP II-CL-56L-BK	BM-56L-BK	EzT2-CL-56L
Ezi-STEP II-CL-60S-BK	BM-60S-BK	EzT2-CL-60S
Ezi-STEP II-CL-60M-BK	BM-60M-BK	EzT2-CL-60M
Ezi-STEP II-CL-60L-BK	BM-60L-BK	EzT2-CL-60L
Ezi-STEP II-CL-86M-BK	BM-86M-BK	EzT2-CL-86M
Ezi-STEP II-CL-86L-BK	BM-86L-BK	EzT2-CL-86L
Ezi-STEP II-CL-86XL-BK	BM-86XL-BK	EzT2-CL-86XL

● Specifications of Drive

Motor Model	BM-20 series	BM-28 series	BM-42 series	BM-56 series	BM-60 series	BM-86 series					
Drive Model	EzT2-CL-20 series	EzT2-CL-28 series	EzT2-CL-42 series	EzT2-CL-56 series	EzT2-CL-60 series	EzT2-CL-86 series					
Input Voltage	DC24V±10%					DC40~70V					
Control Method	Bipolar PWM drive with 32bit MCU										
Current Consumption	Max. 500mA (Except motor current)										
Operating Condition	Ambient Temperature	<ul style="list-style-type: none"> In Use: 0~50°C In Storage: -20~70°C 									
	Humidity	<ul style="list-style-type: none"> In Use: 35~85%RH (Non-Condensing) In Storage: 10~90%RH (Non-Condensing) 									
	Vib. Resist.	0.5g									
Function	Rotation Speed	0~3,000r/min									
	Resolution	Configurable Resolution [P/R]									
		500	1,000	1,600	2,000	3,200	3,600	4,000	5,000	6,400	8,000
	Error Types	Over Current Error, Over Speed Error, Over Temperature Error, Over Regenerated Voltage Error, Motor Connect Error, ROM Error									
I/O Signal	LED Display	Power Status, Alarm Status, RUN Status, STEP ON Status									
	Station Type	Remote Device Station									
	No. of Occupied Station	1~2 Station									
	Max. No. of Connectable Axis	<ul style="list-style-type: none"> 1 Station Occupied: 42 axis 2 Station Occupied: 32 axis 									
I/O Signal	Input Signals	3 dedicated inputs (LIMIT+, LIMIT-, ORIGIN), 7 programmable inputs (Photocoupler Input)									
	Output Signals	6 programmable outputs (Photocoupler Output), 1 Brake output									

● Dimensions of Drive [mm]

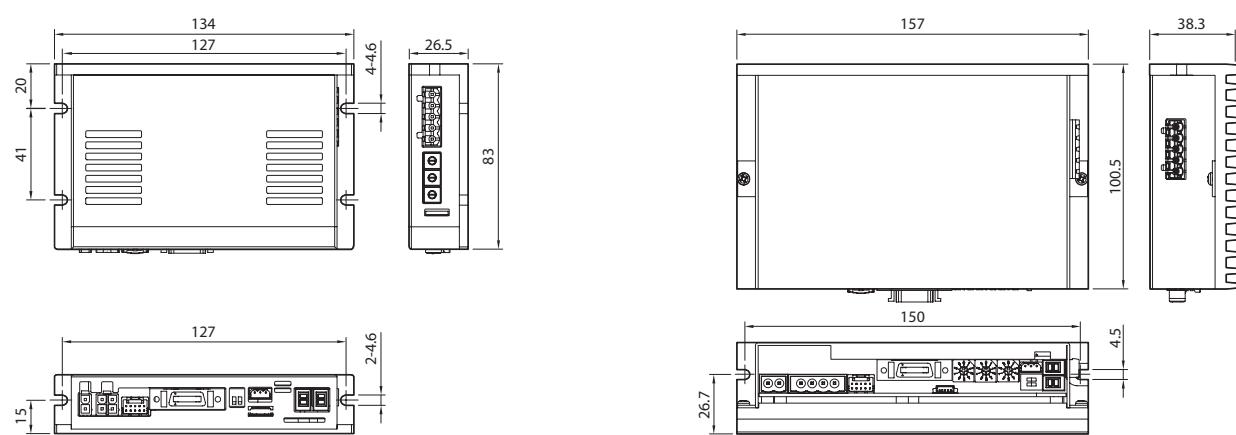


※ 86mm motor drive (EzT2-CL-86 series)


● Specifications of Motor

● Torque Characteristics of Motor


Ezi-STEP II-CL-20 series

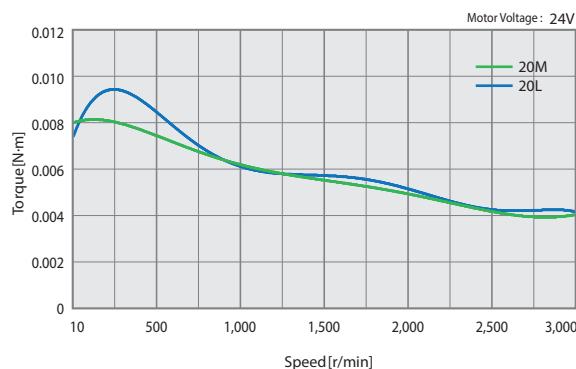


Ezi-STEP II-CL-28 series

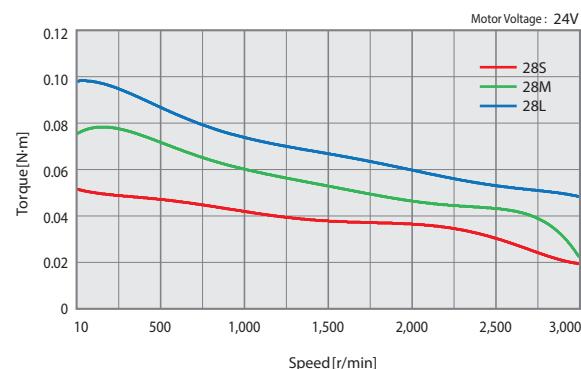


Ezi-STEP II-CL-42 series

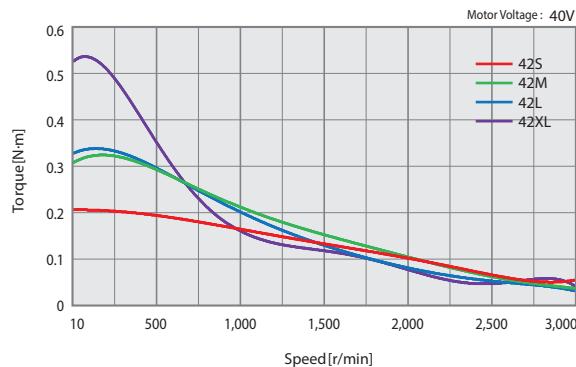


Ezi-STEP II-CL-56 series

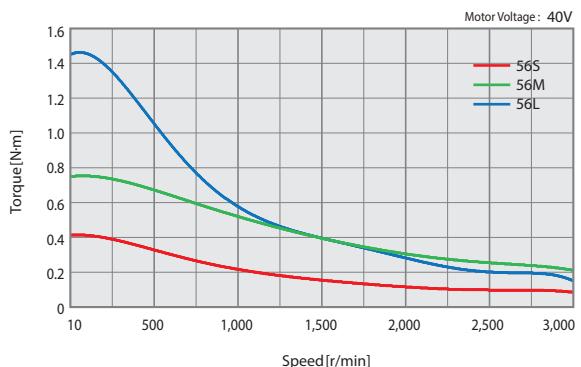


Ezi-STEP II-CL-60 series

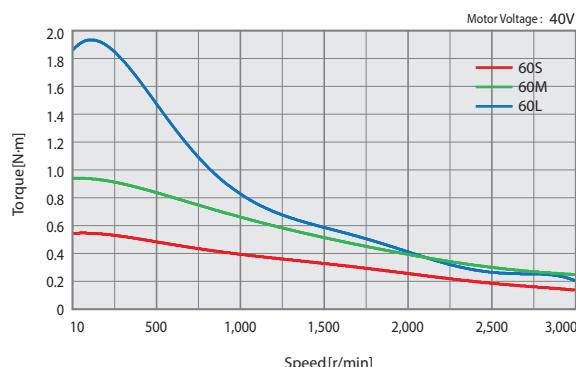

Ezi-STEP II-CL-86 series

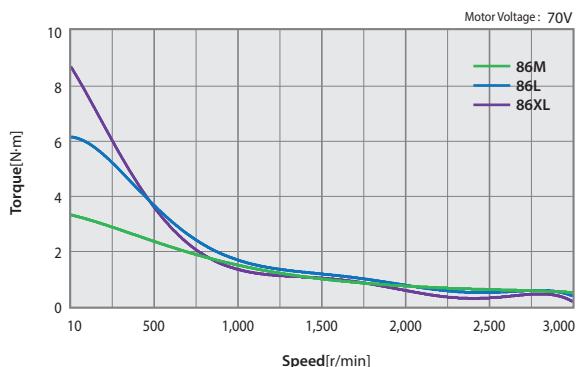


● Dimensions of Motor [mm]

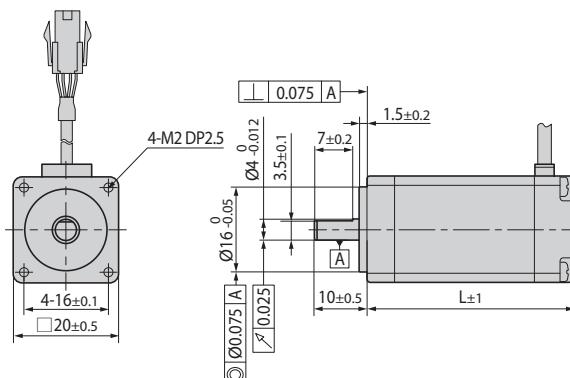


20mm

Model Name	Length(L)
BM-20M	28
BM-20L	38

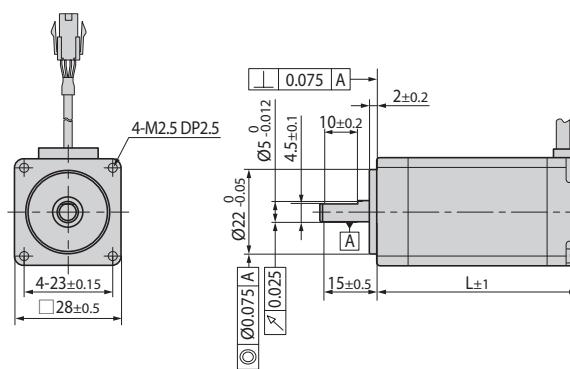


28mm

Model Name	Length(L)
BM-28S	32
BM-28M	45
BM-28L	50

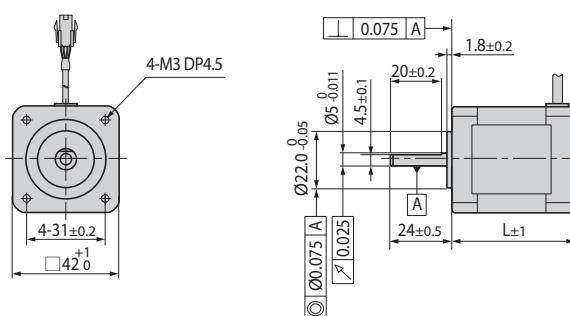

42mm


Model Name	Length(L)
BM-42S	34
BM-42M	40
BM-42L	48
BM-42XL	60

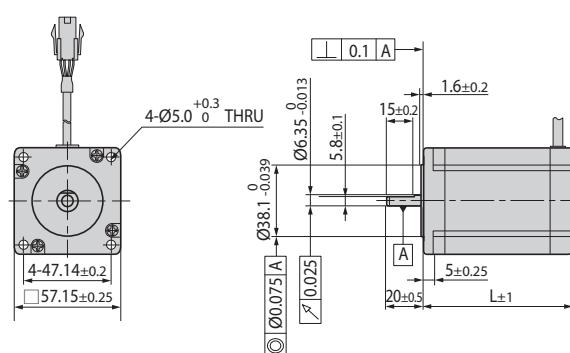

56mm


Model Name	Length(L)
BM-56S	46
BM-56M	55
BM-56L	80

● Dimensions of Motor [mm]

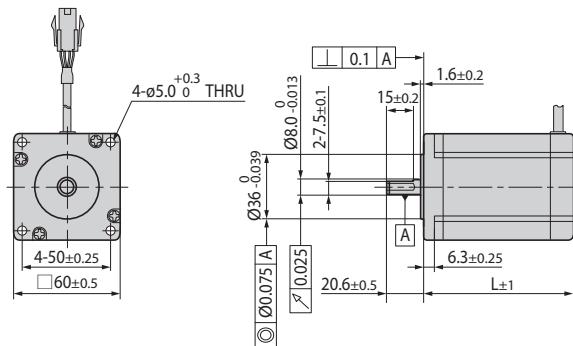

60mm

Model Name	Length(L)
BM-60S	47
BM-60M	56
BM-60L	85

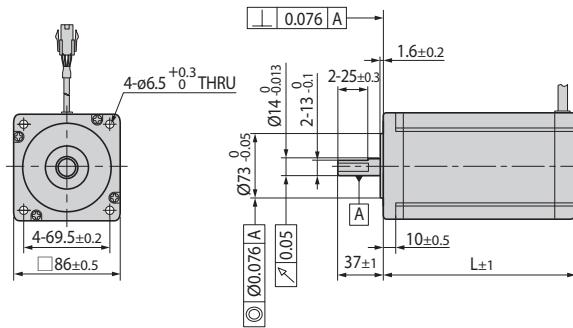

86mm

Model Name	Length(L)
BM-86M	78
BM-86L	117
BM-86XL	155


● Specifications of Motor with Brake

Unit Part Number	Motor Model Number	Electromagnetic Brake					Motor Unit Weight [kg]	Permissible Radial Load [N]		Permissible Axial Load [N]
		Type	Voltage Input [V]	Rated Current [A]	Power Consumption [W]	Static Friction Torque [N·m]		Distance from End of Shaft [mm]	3	
Ezi-STEP II-CL-42S-BK	BM-42S-BK	Non-excitation run Type	DC24V ±10%	0.2	5	0.2	0.500	22	26	33
Ezi-STEP II-CL-42M-BK	BM-42M-BK						0.560			
Ezi-STEP II-CL-42L-BK	BM-42L-BK						0.630			
Ezi-STEP II-CL-42XL-BK	BM-42XL-BK						0.770			
Ezi-STEP II-CL-56S-BK	BM-56S-BK			0.27	6.6	0.7	0.970	52	65	85
Ezi-STEP II-CL-56M-BK	BM-56M-BK						1.150			
Ezi-STEP II-CL-56L-BK	BM-56L-BK						1.580			
Ezi-STEP II-CL-60S-BK	BM-60S-BK						1.060	70	87	114
Ezi-STEP II-CL-60M-BK	BM-60M-BK						1.230			
Ezi-STEP II-CL-60L-BK	BM-60L-BK						1.790			
Ezi-STEP II-CL-86M-BK	BM-86M-BK	0.54	13	4	3.580	270	300	350	400	Must be Lower than Motor Unit Weight
Ezi-STEP II-CL-86L-BK	BM-86L-BK						5.110			
Ezi-STEP II-CL-86XL-BK	BM-86XL-BK						6.630			


- * Electronic Brake cannot be used for braking, Position hold purpose only when power OFF.
- * The weight means Motor Unit Weight including Motor and Electronic Brake.
- * Motor Model Number is combined model name of Motor and Brake.
- * Motor specification and torque characteristic are same as Standard Motor.
- * An external power supply (DC24V) is not required when installing the Electric Brake on the 86mm motor drive.

* Brake Operation Timing Chart

Ezi-STEP II CC-Link controls Brake by Drive automatically.
Please refer to below Timing Chart when Brake is controlled by the upper controller other than using Ezi-STEP II CC-Link Brake control. Otherwise, Drive might malfunction and loads might fall down.
Also, please do not operate Brake during motor operation to prevent damage.

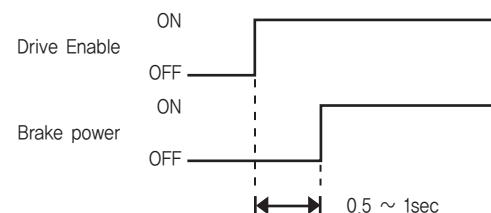


● Dimensions of Motor with Brake [mm]

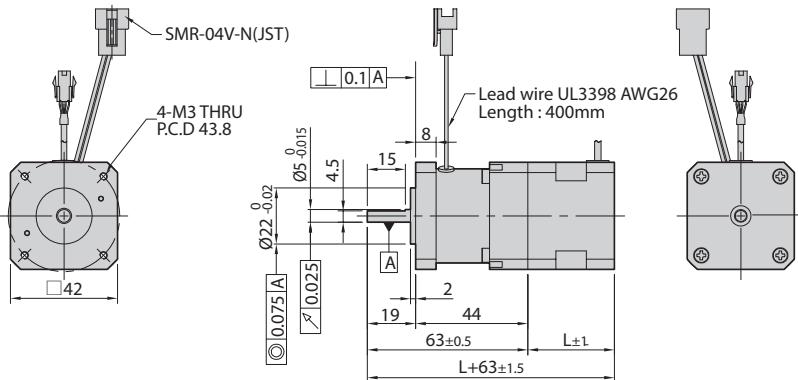


42mm

Model Name	Length(L)
BM-42S	34
BM-42M	40
BM-42L	48
BM-42XL	60

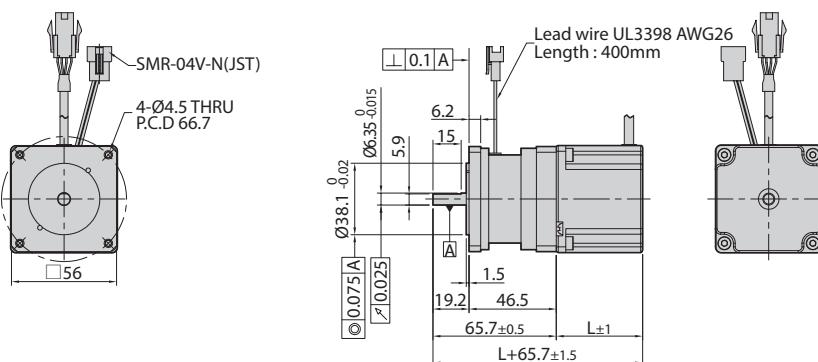


56mm

Model Name	Length(L)
BM-56S	46
BM-56M	55
BM-56L	80

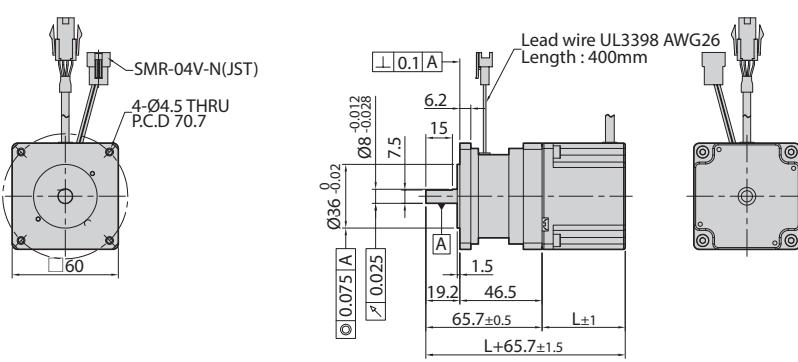

60_{mm}


Model Name	Length(L)
BM-60S	47
BM-60M	56
BM-60L	85

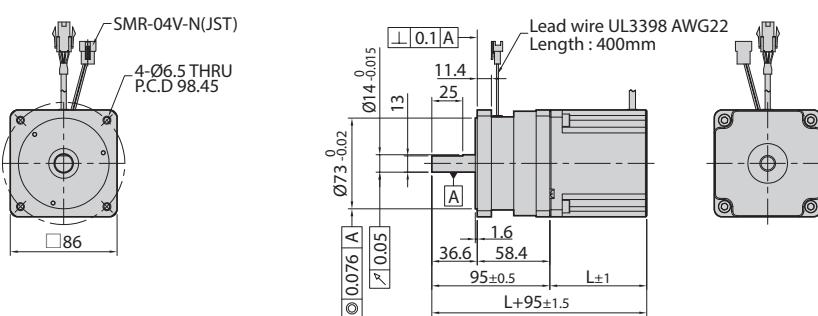


86mm

Model Name	Length(L)
BM-86M	78
BM-86L	117
BM-86XL	155

● Settings and Operation

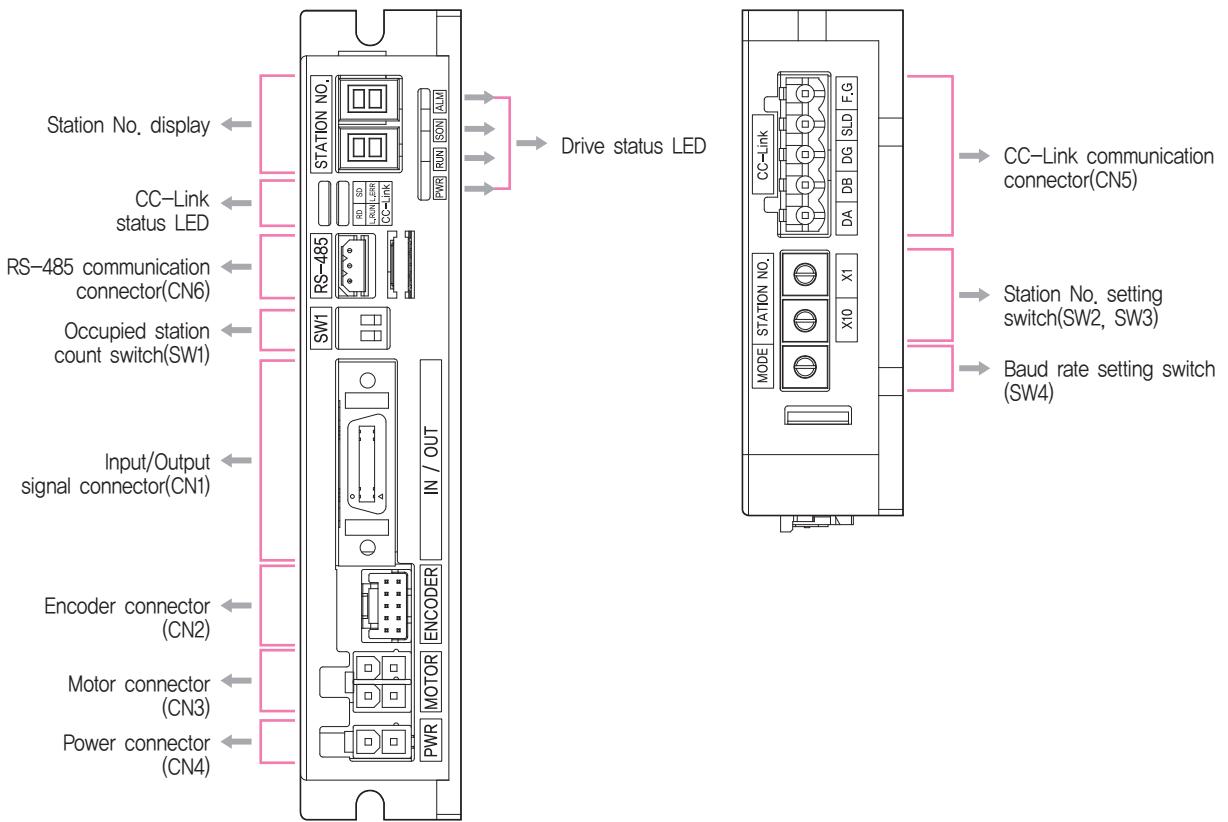


◆ 86mm Motor Drive (EzT2-CL-86 Series)

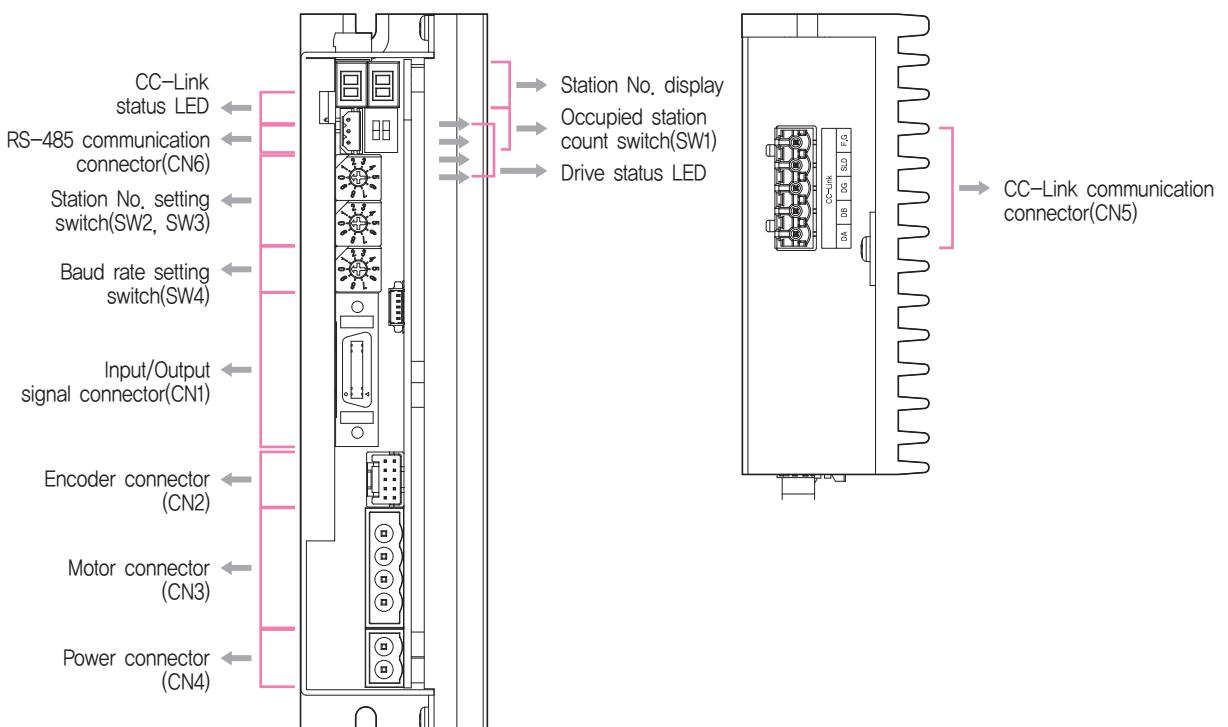

1. Station No. Display and Setting Switch(SW2, SW3)

These switches set the station number of the device station in decimal number. SW2 sets the units digit (X1) and SW3 sets the tens digit (X10).

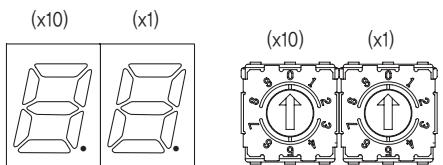


2. CC-Link Status LED

Name	Color	Status	Description
L,RUN	Green	OFF	Power OFF or Data Link is not running
		ON	Data Link is running

Name	Color	Status	Description
L,ERR	Red	OFF	No Error
		ON	Data Link Error
		Flashing at regular intervals	Communication Error
		Flashing at irregular intervals	CRC Error or Network Cable Error

Name	Color	Status	Description
RD	Orange	OFF	Not Receiving Data
		ON	Receiving Data

Name	Color	Status	Description
SD	Yellow	OFF	Not Transmitting Data
		ON	Transmitting Data

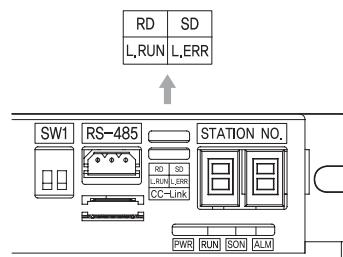

3. Drive Status LED

Name	Color	Function	Description
PWR	Green	Power Input Indication	LED is turned ON when power is applied.
RUN	Yellow	Motor running indication	LED is turned ON while motor is rotating
SON	Orange	STEP ON / OFF Indication	STEP ON: Lights ON, STEP OFF: Lights OFF
ALM	Red	Alarm Indication	LED blinks when an error occurs.

◆ List of error types by the number of alarm LED blinking

No.	Error Code *3	Error Type	Causes
1	E-□01	Over Current Error	The current through power devices in drive exceeds the limit.*1
2	E-□02	Over Speed Error	The motor speed exceeds 3,000r/min.
5	E-□05	Over Temperature Error	Internal temperature of the drive exceeds 85°C.
6	E-□06	Over Regenerative Voltage Error	Back-EMF is higher than limit value.*2
7	E-□07	Motor Connect Error	There is a problem with the connection between the drive and the motor.
12	E-□0C	ROM Error	Error occurs in parameter storage device(ROM).

*1 : Limit value depends on motor model. (Refer to the Manual)

*2 : Voltage limit of Back-EMF depends on motor model. (Refer to the Manual)

*3 : When an alarm occurs, error code is displayed on the 7-segment LED display instead of Station No.

※ Please refer to user Manual for the details of protection functions.

※ □ refers to CC-Link error code.



Alarm LED flash
(e.g., Over Speed Error)

◆ CC-Link Error Code


Error Code	Description
E-0□□.	Operation is normal.
E-1□□.	Station No. switch setting is incorrect.
E-2□□.	Baud rate setting is incorrect.
E-3□□.	Station No. is changed during the operation.
E-4□□.	Baud rate is changed during the operation.
E-5□□.	CRC error
E-6□□.	Timeout error occurred during the communication with the master.
E-7□□.	Communication with master is disconnected.
E-8□□.	CC-Link Processor Error 1
E-9□□.	CC-Link Processor Error 2
E-A□□.	Data link error
E-B□□.	Remote I/O error
E-C□□.	Remote register error

* □□ refers to drive alarm status.

4. Baud Rate Setting Switch(SW4)

This switch sets the baud rate.
(‘MODE’ is marked on the case.)


MODE	Baud Rate
0	156 kbps
1	625 kbps
2	2.5 Mbps
3	5 Mbps
4	10 Mbps
5	NONE
6	NONE
7	NONE
8	NONE
9	NONE



5. Occupied Station Count Switch(SW1)


This switch sets the number of occupied stations.

SW1.1	SW1.2	No. of Occupied Station
OFF	OFF	1 Station Occupied
ON	OFF	2 Station Occupied



6. Input/Output Signal Connector(CN1)

No.	Function	I/O
1	LIMIT+	Input
2	LIMIT-	Input
3	ORIGIN	Input
4	Digital In1	Input
5	Digital In2	Input
6	Digital In3	Input
7	Digital In4	Input
8	Digital In5	Input
9	Digital In6	Input
10	Digital In7	Input
11	Digital Out1	Output
12	Digital Out2	Output
13	Digital Out3	Output
14	Digital Out4	Output
15	Digital Out5	Output
16	Digital Out6	Output
17	BRAKE+	Output
18	BRAKE-	Output
19	EXT_GND	Input
20	EXT_DC24V	Input


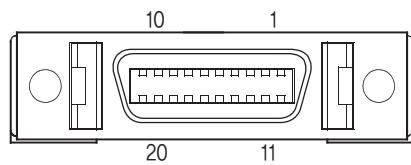


7. Encoder Connector(CN2)

No.	Function	I/O
1	A+	Input
2	A-	Input
3	B+	Input
4	B-	Input
5	Z+	Input
6	Z-	Input
7	DC5V	Output
8	GND	Output
9	F.GND	----
10	F.GND	----

11. RS-485 Communication Connector(CN6)

No.	Function
1	Data+
2	Data-
3	GND

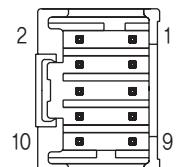



8. Motor Connector(CN3)

No.	Function	I/O
1	A Phase	Output
2	B Phase	Output
3	\bar{A} Phase	Output
4	\bar{B} Phase	Output

No.	Function	I/O
1	\bar{B} Phase	Output
2	B Phase	Output
3	\bar{A} Phase	Output
4	A Phase	Output

※ 86mm Motor Drive



9. Power Connector(CN4)

No.	Function	I/O
1	DC24V	Input
2	GND	Input


No.	Function	I/O
1	GND	Input
2	DC40~70V	Input

※ 86mm Motor Drive




10. CC-Link Communication Connector(CN5)

No.	Function
1	DA
2	DB
3	DG
4	SLD
5	F.GND

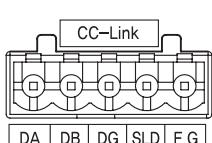

● System Configuration

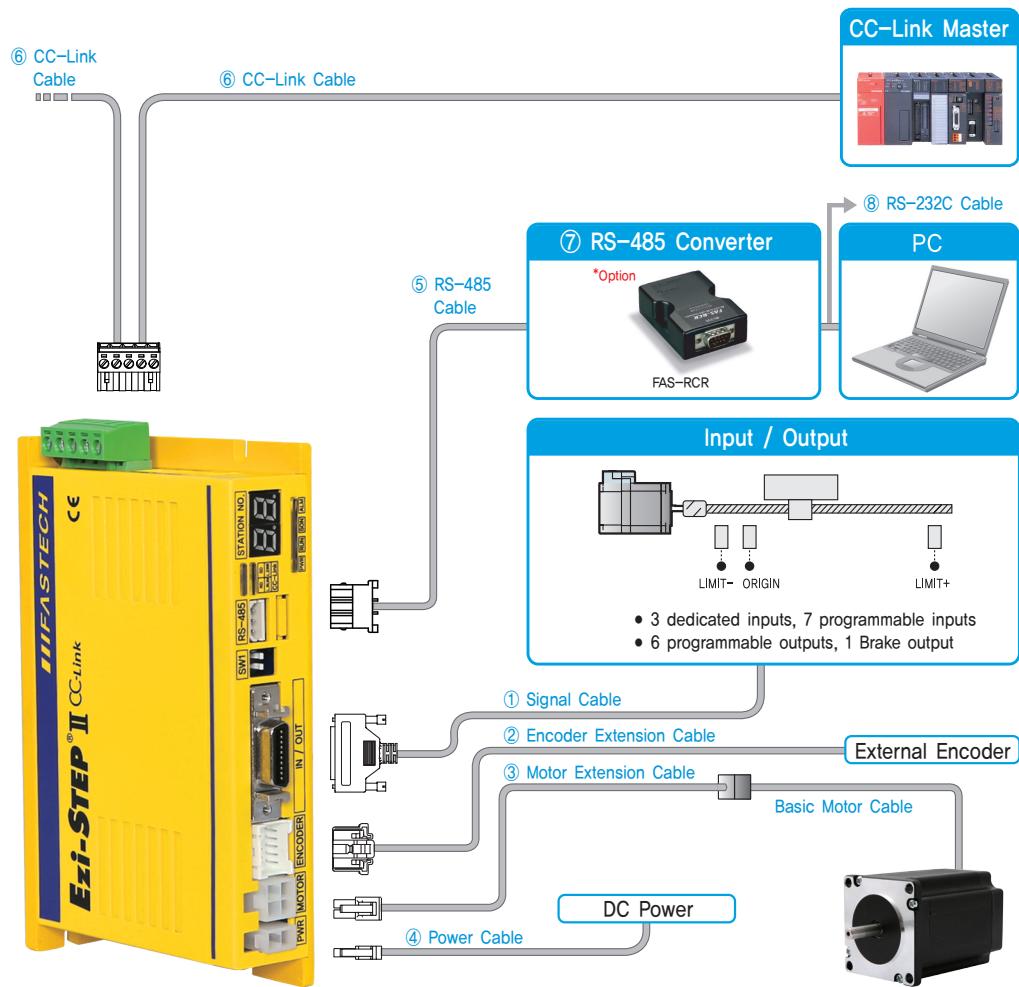

FASTECH Ezi-STEP II CC-Link

Cable Type	Max. Length	Remarks
① Signal Cable	20m	Options (Sold separately)
② Encoder Extension Cable	20m	
③ Motor Extension Cable	20m	
④ Power Cable	2m	
⑤ CC-Link Cable	100m	
⑥ RS-485 Cable	2m	
Basic Motor Cable	0.3m (Basic Length)	Basic cables are attached to motors.

1. Accessories

Connectors

These are connector specifications for drive cabling.

Purpose		Item	Part Number	Manufacturer
Power (CN4)	Housing	5557-02R	MOLEX	
	Terminal	5556T		
Motor	Drive Side (CN3)	Housing	5557-04R	MOLEX
		Terminal	5556T	
	Motor Side	Housing	5557-04R	MOLEX
		Terminal	5556T	
Encoder	Drive Side (CN2)	Housing	51353-1000	MOLEX
		Terminal	56134-9000	
Signal (CN1)	Connector	10120-3000PE	3M	
	Connector Cover	10320-52A0-008		
CC-Link (CN5)		Terminal Block	AK950-5	PTR
RS-485 (CN6)	Housing	5264-03	MOLEX	
	Terminal	5263PBT		

* The connectors above are supplied with the product. If you are using other parts, please make sure they meet the specifications.

2. Options

① Signal Cable

These are the cables to connect Ezi-STEP II CC-Link drive and other input/output devices.

Purpose	Part Number	Length [m]	Cable Type	Remarks	
Drive – I/O Device Connection	CSVN-S-001F	1	Normal Cable	Maximum Length: 20m	
	CSVN-S-002F	2			
	CSVN-S-003F	3			
	CSVN-S-005F	5			
	CSVN-S-001M	1	Robot Cable		
	CSVN-S-002M	2			
	CSVN-S-003M	3			
	CSVN-S-005M	5			

* If you need cables with length(in units of 1m) not listed on the table, please contact FASTECH for more information.

② Encoder Extension Cable

These are the cables to connect Ezi-STEP II CC-Link drive and the encoder.

Purpose	Part Number	Length [m]	Cable Type	Remarks	
Drive – External Encoder Connection	CTPR-E-001F	1	Normal Cable	Maximum Length: 20m	
	CTPR-E-002F	2			
	CTPR-E-003F	3			
	CTPR-E-005F	5			
	CTPR-E-001M	1	Robot Cable		
	CTPR-E-002M	2			
	CTPR-E-003M	3			
	CTPR-E-005M	5			

* If you need cables with length(in units of 1m) not listed on the table, please contact FASTECH for more information.

③ Motor Extension Cable

These are the cables to connect Ezi-STEP II CC-Link drive and the motor.

Purpose	Part Number	Length [m]	Cable Type	Remarks	
Drive – Basic Motor Cable Connection	CSVO-M-001F	1	Normal Cable	Maximum Length: 20m	
	CSVO-M-002F	2			
	CSVO-M-003F	3			
	CSVO-M-005F	5			
	CSVO-M-001M	1	Robot Cable		
	CSVO-M-002M	2			
	CSVO-M-003M	3			
	CSVO-M-005M	5			

* If you need cables with length(in units of 1m) not listed on the table, please contact FASTECH for more information.

④ Drive Power Cable

These are the cables to connect Ezi-STEP II CC-Link drive and the power.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive – Power Connection	CSVO-P-001F	1	Normal Cable	Maximum Length: 2m
	CSVO-P-002F	2		
	CSVO-P-001M	1		
	CSVO-P-002M	2	Robot Cable	

⑤ RS-485 Cable

Purpose	Part Number	Length [m]	
RS-485 Connection	CGNR-RT-001F	1	Normal Cable
	CGNR-RT-002F	2	
	CGNR-RT-003F	3	
	CGNR-RT-005F	5	

* If you need cables with length(in units of 1m) not listed on the table or robot cables, please contact FASTECH for more information.

⑥ CC-Link Cable

It is the cable to connect Ezi-STEP II CC-Link drive and the CC-Link system.

* This cable is not provided by FASTECH, It is recommended to use the standard cable specified by the CC-Link Association.

⑦ RS-485 Converter

Purpose	Part Number	Specifications		Product Image
RS-232C to RS-485 Converter	FAS-RCR	Baud Rate	Max. 115,2kbps	
		Comm. Distance	RS-232C: Max. 15m RS-485: Max. 1.2km	
		Connector	RS-232C: DB9 Female RS-485: RJ-45	
		Dimensions	50X75X23mm	
		Weight	38g	
		Power	Power supplied by RS-232C (DC5~24V external power can be applied)	


⑧ RS-232C Cable

These are the cables to connect FAS-RCR and RS-232C port of the host controller.

Purpose	Part Number	Length [m]	Cable Type
FAS-RCR – RS-232C Connection	CGNR-C-002F	2	Normal Cable
	CGNR-C-003F	3	
	CGNR-C-005F	5	

[Option] TB-Plus Interface Board

This is an interface board to connect Ezi-STEP II CC-Link drive and I/O signals more conveniently.

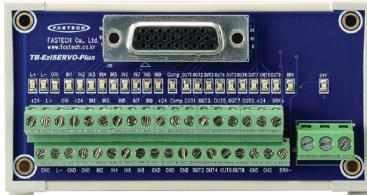Purpose	Part Number	Product Image
Drive – I/O signal Connection Board	TB-Plus	


[Option] TB-Plus Interface Cable

These are the cables to connect Ezi-STEP II CC-Link and TB-Plus interface board.

Purpose	Part Number	Length [m]	Cable Type	Remarks	
Drive – Interface(TB-Plus) Connection	CIFN-S-001F	1	Normal Cable	Maximum Length: 20m	
	CIFN-S-002F	2			
	CIFN-S-003F	3			
	CIFN-S-005F	5			
	CIFN-S-001M	1	Robot Cable		
	CIFN-S-002M	2			
	CIFN-S-003M	3			
	CIFN-S-005M	5			

* If you need cables with length(in units of 1m) not listed on the table, please contact FASTECH for more information.

● System Configuration [86mm Motor Drive]

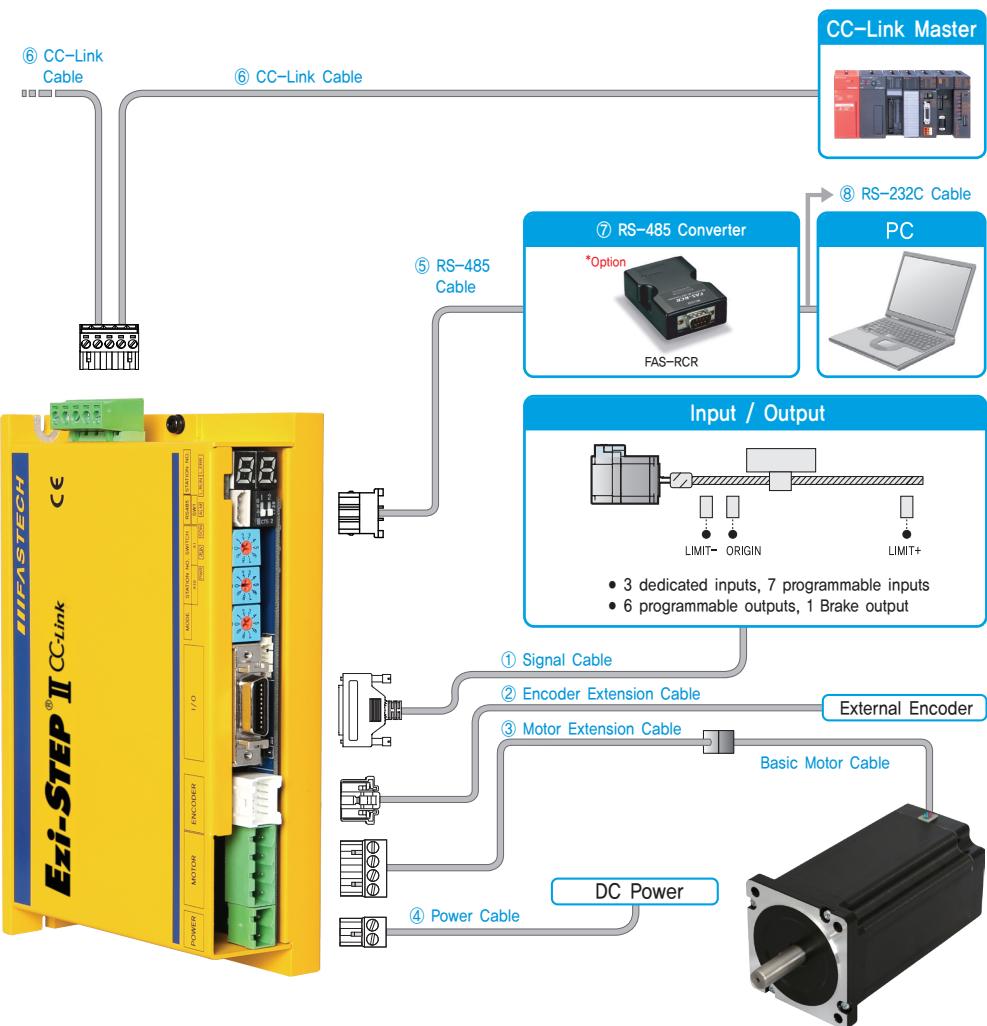

FASTECH Ezi-STEP II CC-Link

Cable Type	Max. Length	Remarks
① Signal Cable	20m	Options (Sold separately)
② Encoder Extension Cable	20m	
③ Motor Extension Cable	20m	
④ Power Cable	2m	
⑤ CC-Link Cable	100m	
⑥ RS-485 Cable	2m	
Basic Motor Cable	0.3m (Basic Length)	Basic cables are attached to motors.

1. Accessories

Connectors

These are connector specifications for drive cabling.

Purpose	Item	Part Number	Manufacturer
Power (CN4)	Terminal Block	AK950-2	PTR
Motor	Drive Side (CN3)	Terminal Block	AK950-4
	Motor Side	Housing	5557-04R
Encoder	Drive Side (CN2)	Terminal	5556T
		Housing	51353-1000
Signal (CN1)	Connector	56134-9000	MOLEX
		10120-3000PE	3M
CC-Link (CN5)	Terminal Block	10320-52A0-008	PTR
		AK950-5	
RS-485 (CN6)	Housing	5264-03	MOLEX
		5263PBT	

* The connectors above are supplied with the product. If you are using other parts, please make sure they meet the specifications.

2. Options

① Signal Cable

These are the cables to connect Ezi-STEP II CC-Link drive and other input/output devices.

Purpose	Part Number	Length [m]	Cable Type	Remarks	
Drive – I/O Device Connection	CSVN-S-001F	1	Normal Cable	Maximum Length: 20m	
	CSVN-S-002F	2			
	CSVN-S-003F	3			
	CSVN-S-005F	5			
	CSVN-S-001M	1	Robot Cable		
	CSVN-S-002M	2			
	CSVN-S-003M	3			
	CSVN-S-005M	5			

* If you need cables with length(in units of 1m) not listed on the table, please contact FASTECH for more information.

② Encoder Extension Cable

These are the cables to connect Ezi-STEP II CC-Link drive and the encoder.

Purpose	Part Number	Length [m]	Cable Type	Remarks	
Drive – External Encoder Connection	CTPR-E-001F	1	Normal Cable	Maximum Length: 20m	
	CTPR-E-002F	2			
	CTPR-E-003F	3			
	CTPR-E-005F	5			
	CTPR-E-001M	1	Robot Cable		
	CTPR-E-002M	2			
	CTPR-E-003M	3			
	CTPR-E-005M	5			

* If you need cables with length(in units of 1m) not listed on the table, please contact FASTECH for more information.

③ Motor Extension Cable

These are the cables to connect Ezi-STEP II CC-Link drive and the motor.

Purpose	Part Number	Length [m]	Cable Type	Remarks	
Drive – Basic Motor Cable Connection	CSVP-M-001F	1	Normal Cable	Maximum Length: 20m	
	CSVP-M-002F	2			
	CSVP-M-003F	3			
	CSVP-M-005F	5			
	CSVP-M-001M	1	Robot Cable		
	CSVP-M-002M	2			
	CSVP-M-003M	3			
	CSVP-M-005M	5			

* If you need cables with length(in units of 1m) not listed on the table, please contact FASTECH for more information.

④ Drive Power Cable

These are the cables to connect Ezi-STEP II CC-Link drive and the power.

Purpose	Part Number	Length [m]	Cable Type	Remarks
Drive – Power Connection	CSVP-P-001F	1	Normal Cable	Maximum Length: 2m
	CSVP-P-002F	2		
	CSVP-P-001M	1		
	CSVP-P-002M	2	Robot Cable	

⑤ RS-485 Cable

Purpose	Part Number	Length [m]	Remarks
RS-485 Connection	CGNR-RT-001F	1	Normal Cable
	CGNR-RT-002F	2	
	CGNR-RT-003F	3	
	CGNR-RT-005F	5	

* If you need cables with length(in units of 1m) not listed on the table or robot cables, please contact FASTECH for more information.

⑥ CC-Link Cable

It is the cable to connect Ezi-STEP II CC-Link drive and the CC-Link system.

* This cable is not provided by FASTECH, It is recommended to use the standard cable specified by the CC-Link Association.

⑦ RS-485 Converter

Purpose	Part Number	Specifications		Product Image
RS-232C to RS-485 Converter	FAS-RCR	Baud Rate	Max. 115,2kbps	
		Comm. Distance	RS-232C: Max. 15m RS-485: Max. 1.2km	
		Connector	RS-232C: DB9 Female RS-485: RJ-45	
		Dimensions	50X75X23mm	
		Weight	38g	
		Power	Power supplied by RS-232C (DC5~24V external power can be applied)	

⑧ RS-232C Cable

These are the cables to connect FAS-RCR and RS-232C port of the host controller.

Purpose	Part Number	Length [m]	Cable Type
FAS-RCR – RS-232C Connection	CGNR-C-002F	2	Normal Cable
	CGNR-C-003F	3	
	CGNR-C-005F	5	

[Option] TB-Plus Interface Board

This is an interface board to connect Ezi-STEP II CC-Link drive and I/O signals more conveniently.

Purpose	Part Number	Product Image
Drive – I/O signal Connection Board	TB-Plus	

[Option] TB-Plus Interface Cable


These are the cables to connect Ezi-STEP II CC-Link and TB-Plus interface board.

Purpose	Part Number	Length [m]	Cable Type	Remarks	
Drive – Interface(TB-Plus) Connection	CIFN-S-001F	1	Normal Cable	Maximum Length: 20m	
	CIFN-S-002F	2			
	CIFN-S-003F	3			
	CIFN-S-005F	5			
	CIFN-S-001M	1	Robot Cable		
	CIFN-S-002M	2			
	CIFN-S-003M	3			
	CIFN-S-005M	5			

* If you need cables with length(in units of 1m) not listed on the table, please contact FASTECH for more information.

● External Wiring Diagram

FASTECH Ezi-STEP II CC-Link

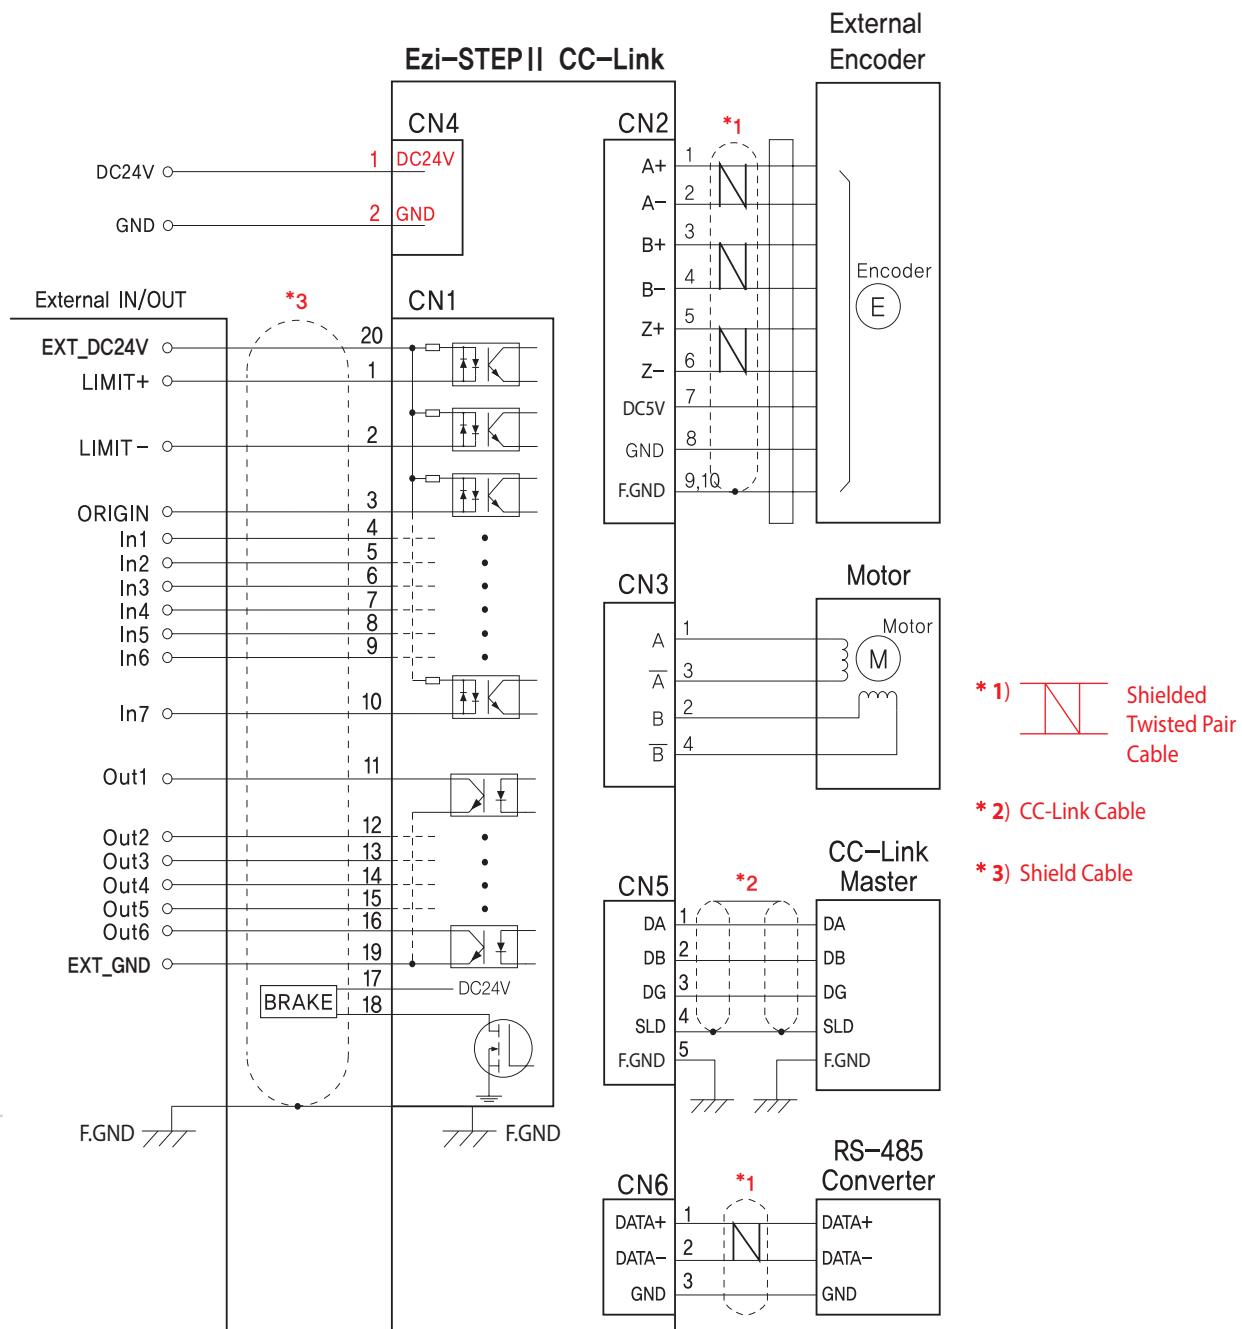


※ When connecting I/O cable between controller and drive, please turn off the power of both controller and drive to prevent electric shock or to protect the drive from any damage.

CAUTION

In order to use the products listed in this catalog safely and correctly, be sure to read the instruction manual before using the product.

● External Wiring Diagram [86mm Motor Drive]

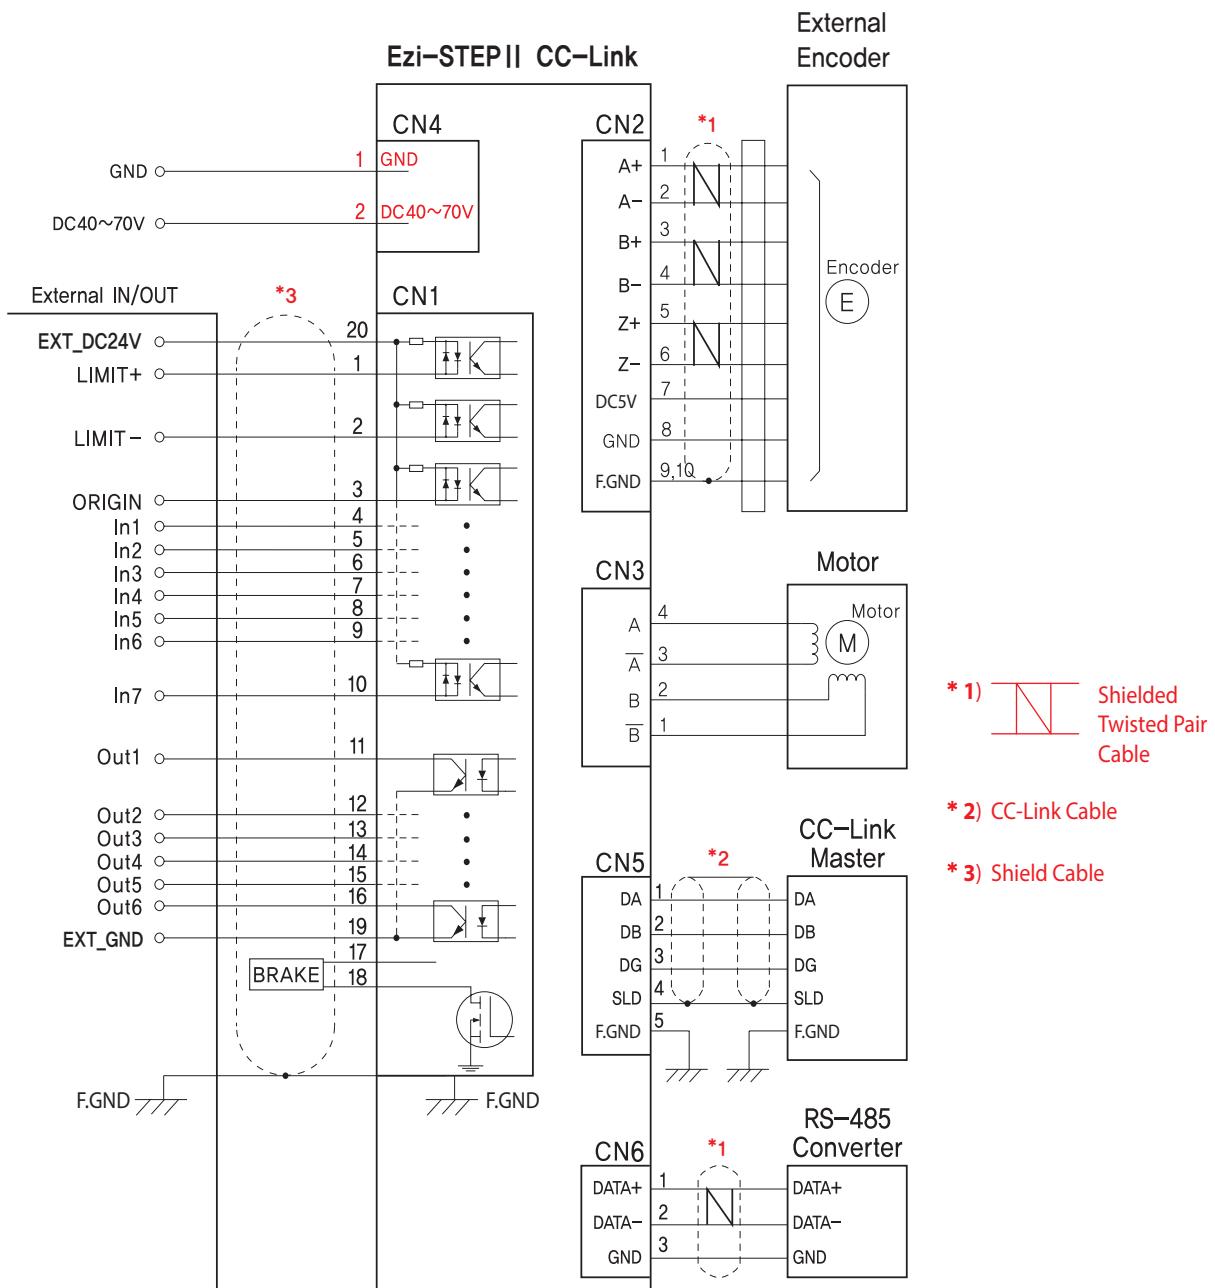

※ When connecting I/O cable between controller and drive, please turn off the power of both controller and drive to prevent electric shock or to protect the drive from any damage.

CAUTION

In order to use the products listed in this catalog safely and correctly, be sure to read the instruction manual before using the product.



Fast, Accurate, Smooth Motion

FASTECH Co., Ltd.

Rm#1202, 401-dong, Bucheon Techno-Park,
655, Pyeongcheon-ro, Bucheon-si Gyeonggi-do,
Republic of Korea (Postal Code: 14502)
TEL : +82-32-234-6317 FAX : +82-32-234-6302
E-mail : sales@fastech-motions.com
Homepage : www.fastech-motions.com